



RVP-40 PARTS LIST

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
100	21004129	Main body	700	27002043	Drive gear
200	22004371	Side plate	702	27020805	Pinion gear
201	22010660	Main body decoration	705	27050170	Transmission gear
201	22010661	Side plate decoration	708	27080146	Oscillating slider
300	23004973	Rotor	718	27180760	Main shaft
301	23012037	Bail arm	719	27190037	Click gear
302	23020015	Bail arm spring	722	27220009	Click gear washer
304	23042721	Bail arm cover	800	28000242	Anti-reverse/anti-re lever
305	23050176	Kick lever	800	28000322	Anti-reverse/anti-re lever
307	23071744	Bail holder	801	28010024	Anti-re lever spring
313	23131653	Bail wire	804	28040044	Anti-re. pawl
314	23140188	Bail nut	808	28080044	Ratchet
315	23150067	Line roller	809	28090017	Silent spring
318	23180006	Rotor nut	0910049	0910049	Ball bearing
400	240014711	Spool assy.	0920376	0920376	Washer
405	24050042	Drag washer retainer	0920154	0920154	Washer
500	25005923	Handle assy.	0930417	0930417	Screw
513	25130850	Handle cap	0930574	0930574	Screw
515	25150002	Handle screw cap washer	09301006	09301006	Screw
600	26003300	Drag knob assy.	09301373	09301373	Screw
610	26100011	Drag washer	0930967	0930967	Screw
611	26110004	Eared washer	0930636	0930636	Screw
612	26120003	Key washer	0930662	0930662	Screw
612	26120054	Key washer	0930836	0930836	Screw
612	26120004	Key washer			