



### RV-25 PARTS LIST

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
100	21004117	Main body	702	27020804	Pinion gear
200	22004364	Side plate	705	27050169	Transmission gear
201	22010659	Side plate decoration	708	27080145	Oscillating slider
201-1	22010658	Main body decoration	718	27180759	Main shaft
300	23004904	Rotor	719	27190029	Click gear
301	23011973	Bail arm	722	27220009	Click gear washer
302	23020015	Bail arm spring	800	28000333	Anti-reverse/anti-re lever
304	23042659	Bail arm cover	800-1	28000345	Anti-reverse/anti-re lever
305	23050141	Kick lever	801	28010024	Anti-re lever spring
307	23071575	Bail holder	804	28040037	Anti-re lever pin
313	23131648	Bail wire	808	28080042	Ratchet
314	23140188	Bail nut	809	28090017	Silent spring
315	23150067	Line roller	0910049	0910049	Ball bearing
318	23180006	Rotor nut	0920376	0920376	Washer
400	240015080	Spool assy	0920154	0920154	Washer
405	24050042	Darg washer retainer	0930417	0930417	Screw
500	25006019	Handle assy.	0930539	0930539	Screw
513	25130850	Handle cap	0930437	0930437	Screw
515	25150002	Handle screw cap washer	09301006	09301006	Screw
600	26003300	Drag knob	09301373	09301373	Screw
610	26100011	Drag washer	0930980	0930980	Screw
611	26110004	Eared washer	0930428	0930428	Screw
612	26120004	Key washer	0930636	0930636	Screw
612-1	26120054	Key washer	0930829	0930829	Screw
700	27002039	Drive gear	0930836	0930836	Screw