



RV-55 PARTS LIST

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
100	21004136	Main body	700	27000264	Drive gear
102	21020002	Bushing	702	27020927	Pinion gear
200	22004376	Side plate	705	27050159	Transmission gear
201	22010649	Side plate decoration	708	27080163	Oscillating slider
201	22010648	Main body decoration	718	27180738	Main shaft
300	23004924	Rotor	719	27190025	Click gear
301	23012016	Bail arm	722	27220009	Click gear washer
302	23020017	Bail arm spring	800	28000256	Anti-reverse/anti-re lever
304	23042684	Bail arm cover	800	28000330	Anti-reverse/anti-re lever
305	23050205	Kick lever	801	28010039	Anti-re lever spring
307	23071745	Bail holder	804	28040036	Anti-re lever pin
313	23131667	Bail wire	808	28080047	Ratchet
314	23140199	Bail nut	809	28090018	Silent spring
315	23150010	Line roller	0910096	0910096	Ball bearing
318	23180032	Rotor nut	0920376	0920376	Washer
400	240015083	Spool assy.	0920151	0920151	Washer
405	24050031	Drag washer retainer	0930043	0930043	Screw
500	25005925	Handle assy.	0930577	0930577	Screw
513	25130848	Handle cap	0930417	0930417	Screw
515	25150002	Handle screw cap washer	0930999	0930999	Screw
600	26003300	Drag knob assy.	09301397	09301397	Screw
610	26100049	Drag washer	0930640	0930640	Screw
611	26110016	Eared washer	0930967	0930967	Screw
612	26120039	Key washer	0930215	0930215	Screw
612	26120056	Key washer	0930826	0930826	Screw
612	26120040	Key washer			